


SWIT®

Chroma Key Screen

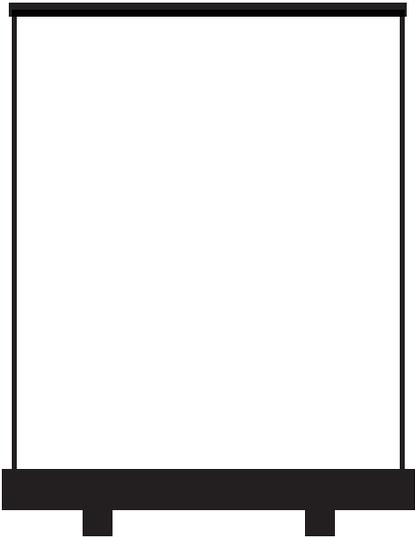


Chroma Key Screen User Manual

Ver: A


Thank you for choosing our products, please read this user manual before using, also save it for future reference

Appearance

Front View

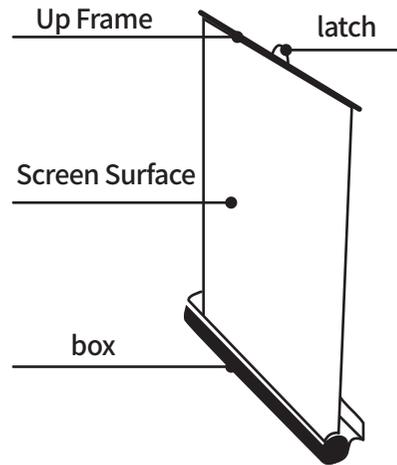


Back View

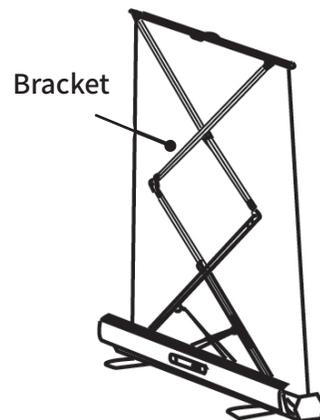


Instruction


1. Pull the stand out and rotate it to the vertical angle.

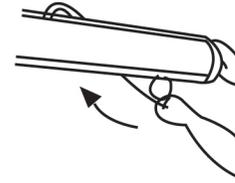

2. Unfold the screen: Use the latch to slowly pull the screen to different height.

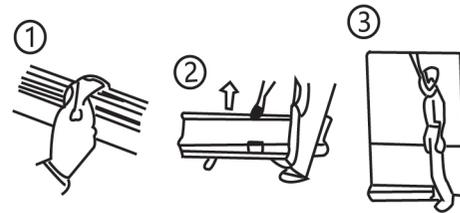

3. Fold the screen: Pull the latch to slowly fold the screen to the box, then lock the latch.

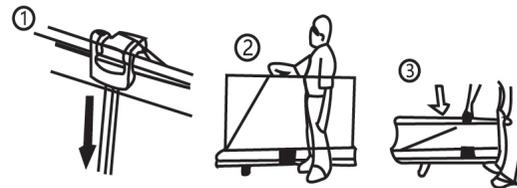

Warning

The screen must be completely fold in the box to lock the latch, otherwise the curtain will be damaged

Caution

In order to improve the use effect of the product, the screen surface has been specially processed, if the screen surface is dirty, it will affect the use effect.

1. Do not touch the screen surface with dirty hands to avoid fouling the screen.
2. Do not lend the screen with sharp objects to avoid scratches.
3. Please wipe the dust and stains on the curtain with dry soft cloth or water. Do not use chemical reagents such as gasoline to wipe.

SWIT®

SWIT Electronics Europe GmbH

Heerdterbuschstraße 10 / HALLE 9,41460 Neuss, NRW Germany

Tel: +49(0)2131 6632331 Email: info@swit-europe.com

SWIT Electronics Co., Ltd.

Add: 10 Hengtong Road, Xin'gang, Nanjing Economic and Technological Development Zone, Nanjing 210038, P.R.China

Tel: +86-25-85805753 Email: contact@swit.cc